

# Installation Manual

## WI-I/O 9-L-x Wireless I/O



## Document information

Installation Manual WI-I/O 9-L-x Wireless I/O Version 1.6

## Weidmuller Inc. contact details

Address > 821 Southlake Blvd., Richmond, VA 23236  
Telephone > (800) 849-9343  
Fax > (804) 897-4134  
Email > [support@weidmuller.com](mailto:support@weidmuller.com)  
Website > [www.weidmuller.com](http://www.weidmuller.com)

## Copyright

### Limited lifetime warranty, disclaimer and limitation of remedies

Weidmuller Inc. products are warranted to be free from manufacturing defects for the “serviceable lifetime” of the product. The “serviceable lifetime” is limited to the availability of electronic components. If the serviceable life is reached in less than three years following the original purchase from Weidmuller Inc., Weidmuller Inc. will replace the product with an equivalent product if an equivalent product is available.

This warranty does not extend to:

- Failures caused by the operation of the equipment outside the particular product’s specification, or
- Use of the module not in accordance with this User Manual, or
- Abuse, misuse, neglect or damage by external causes, or
- Repairs, alterations, or modifications undertaken other than by an authorized Service Agent.

Weidmuller Inc.’ liability under this warranty is limited to the replacement or repair of the product.

This warranty is in lieu of and exclusive of all other warranties. This warranty does not indemnify the purchaser of products for any consequential claim for damages or loss of operations or profits and Weidmuller Inc. is not liable for any consequential damages or loss of operations or profits resulting from the use of these products. Weidmuller Inc. is not liable for damages, losses, costs, injury or harm incurred as a consequence of any representations, warranties or conditions made by Weidmuller Inc. or its representatives or by any other party, except as expressed solely in this document.

---

# Contents

---

|  |           |
|--|-----------|
| <b>Contents</b>                            | <b>3</b>  |
| About this document                        | 6         |
| <b>Installing your unit</b>                | <b>7</b>  |
| Unit components and connections            | 8         |
| Transmitter unit                           | 8         |
| Receiver unit                              | 10        |
| Installing the antenna                     | 12        |
| Supported antennas                         | 12        |
| Radio transmission distances               | 14        |
| Installing and earthing antennas           | 15        |
| Dipole and collinear antennas              | 16        |
| Dipole antennas                            | 16        |
| Collinear antennas                         | 16        |
| Yagi antennas                              | 18        |
| Installing the power supply                | 20        |
| <b>Inputs and outputs</b>                  | <b>21</b> |
| Digital inputs                             | 22        |
| Relay outputs                              | 23        |
| Status outputs                             | 24        |
| Analog input                               | 25        |
| Thermocouple input                         | 28        |
| Pulse input                                | 29        |
| Analog output                              | 30        |
| <b>Installing and configuring the unit</b> | <b>32</b> |
| Installing the unit                        | 33        |
| Configuring your units                     | 34        |
| Testing your units                         | 35        |
| <b>Unit specifications</b>                 | <b>36</b> |
| Transmitter unit                           | 36        |
| Receiver unit                              | 36        |
| Ancillary hardware reference information   | 37        |
| RS232 serial cable                         | 37        |
| <b>Index</b>                               | <b>38</b> |

---

**This page intentionally left blank.**

## Safety information

Thank you for selecting the WI-I/O 9-L-x for your telemetry needs. We trust it will give you many years of valuable service. To ensure your WI-I/O 9-L-x enjoys a long life, double-check **ALL** your connections with the **Installation Guide** before powering on the module.

**WARNING:** Incorrect termination of supply wires may cause internal damage and will void warranty.

Exposure to RF energy is an important safety consideration. The FCC has adopted a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated equipment as a result of its actions in Docket 93-62 and OET Bulletin 65 Edition 97-01.

### FCC Notice when used in USA: WI-I/O 9-x Wireless I/O Module

| Part | Additional information   |
|------|--|
| 15   | This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC rules (Code of Federal Regulations 47CFR Part 15). Operation is subject to the condition that this device does not cause harmful interference. |
| 90   | This device has been type accepted for operation by the FCC in accordance with Part90 of the FCC rules (47CFR Part 90). See the label on the unit for the specific FCC ID and any other certification designations.  |

### Industry Canada: WI-I/O 9-x Wireless I/O Module

RSS-119 - This device has been type accepted for operation by Industry Canada in accordance with RSS-119 of the Industry Canada rules. See the label on the unit for the specific Industry Canada certification number and any other certification designations.

**NOTE:** Any changes or modifications not expressly approved by Weidmuller Inc. P/L could void the user's authority to operate this equipment.

To operate this equipment legally the user must obtain a radio-operating license from the government agency. This is done so the government can coordinate radio users in order to minimize interference.

### Safety information - FCC Notice

This device complies with Part 15.247 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference; and
- This device must accept any interference received, including interference that may cause undesired operation

**NOTE:** This equipment is suitable for use in Class 1 Division 2 groups A, B and C or non-hazardous locations only.

### **\*\*IMPORTANT ELECTRICAL SAFETY INFORMATION\*\***

In order to comply with Electrical Safety Regulations, this module must be installed in an Electrical AND Fire enclosure. This enclosure may be a single or multiple enclosures. Access to the module is to be made by a Service Person only.

---

## About this document

This document is the **WI-I/O 9-L-x Wireless I/O Installation Manual** that describes how to install your WI-I/O 9-L-x units and contains important information for installing your units with other equipment.

---

### Note

If your network only contains one transmitter and receiver pair, you should also read the WI-I/O 9-L-x QuickStart Guides.

---

This document contains the following sections:

| Section                                       | Read this section if you want to ...  |
|---|---|
| <b>Basic steps for using your unit</b>        | Learn the basic steps for installing and using your unit.   |
| <b>Factory default configuration</b>          | Understand how the transmitter sends information to the receiver.   |
| <b>Unit components</b>                        | Understand the different parts of your unit.  |
| <b>Antenna installation</b>                   | Learn how to install an antenna with your unit.   |
| <b>Resetting factory defaults</b>             | Reset your unit to the original factory default settings.   |
| <b>Linking transmitter and receiver units</b> | Link your units to work as a dedicated pair.  |
| <b>Safety information</b>                     | Understand important safety information related to your unit.<br><b>NOTE:</b> You must read this information before installing your unit. |
| <b>Specifications</b>                         | Know technical information about your unit.   |

For more information, see the next sections.

---

# Installing your unit

---

This section describes how to install your unit and contains the following sections:

| Step  | Description  | For more information, see ...              |
|---|--|--|
| <b>1 – Read the safety information</b>      | Lets you understand important safety information related to your unit.<br><b>NOTE:</b> You must read this information before installing your unit. | Safety information on page 5.              |
| <b>2 – Get to know the unit features</b>    | Understand the basic features of your unit.  | Unit components and connections on page 8. |
| <b>3 – Install the antenna</b>              | Learn how to install an antenna with your unit.  | Installing the antenna on page 12.         |
| <b>4 – Install the power supply</b>         | Learn how to install a power supply for your unit.   | Installing the power supply on page 20.    |
| <b>5 – Install the units</b>                | Learn how to install your unit.  | Installing the unit on page 33.            |
| <b>6 – Linking and configuring the unit</b> | Learn how to link and configure your units to transmit and receive information.  | Configuring your units on page 34.         |
| <b>7 – Test the unit</b>                    | Understand the principles for testing your units.  | Testing your units on page 35.             |

---

## Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

---


For more information, see the next sections.

## Unit components and connections

This section shows the components and terminal connections for the transmitter and receiver units.


*Transmitter unit*

Your transmitter unit has the following components and terminal connections:

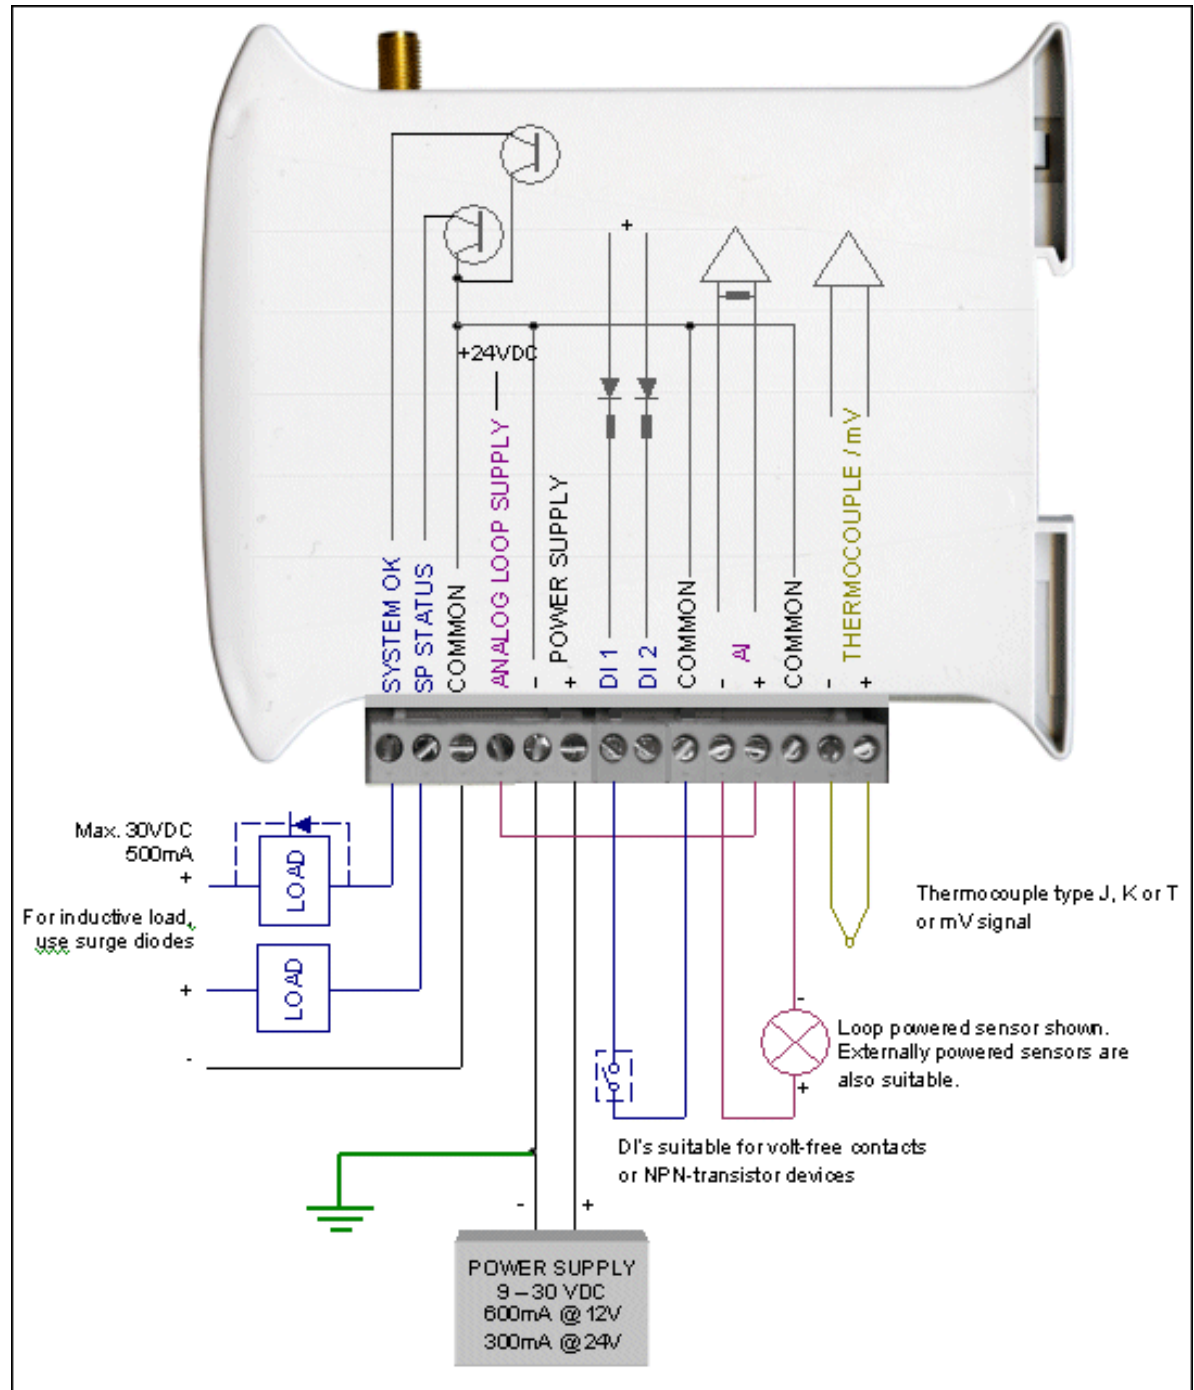




The front panel contains the following components:

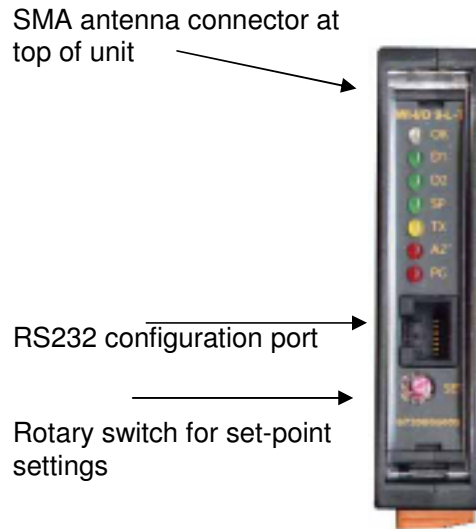

The triangle on the rotary switch indicates the current position, for example:

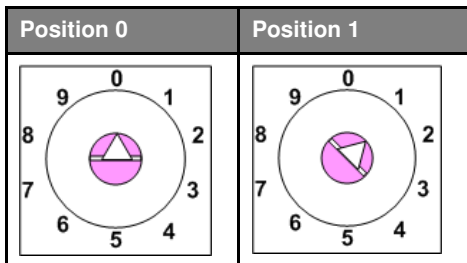


**NOTE:** To avoid damaging the rotary switch, use a screwdriver to change the position.

The rotary switch controls the setpoint levels on the Analog and Thermocouple inputs. The LEDs on the front panel indicate the unit status:


| LED Status                   | Indicates   |                                  |
|------------------------------|---|----------------------------------|
| <b>None</b>                  | No power supply.  |                                  |
| <b>OK LED Green</b>          | Current status of the unit OK.  |                                  |
| <b>OK LED Red</b>            | Fault condition detected in unit.   |                                  |
| <b>TX Led Flashes</b>        | Transmitting Message.   |                                  |
| <b>PG LED on</b>             | Configuration Cable Connected.  |                                  |
| <b>Input LED ON</b>          | Input LEDS (i.e. D1, D2, SP, AZ.) light when the corresponding input is active.   |                                  |
|                              | D1  | Digital Input 1 is active (Low). |
|                              | D2  | Digital Input 2 is active.       |
|                              | SP  | Analog Setpoint is active.       |
|                              | AZ  | Analog Input is zero mA          |
| <b>All LEDs medium flash</b> | Medium speed flash (1.6HZ) indicates the module is halfway through the configuration process. Medium flash also happens when you set the rotary switch to position 0 when powering on the unit. |                                  |

## Receiver unit

Your WI-I/O 9-L-x unit has the following components and terminal connections:

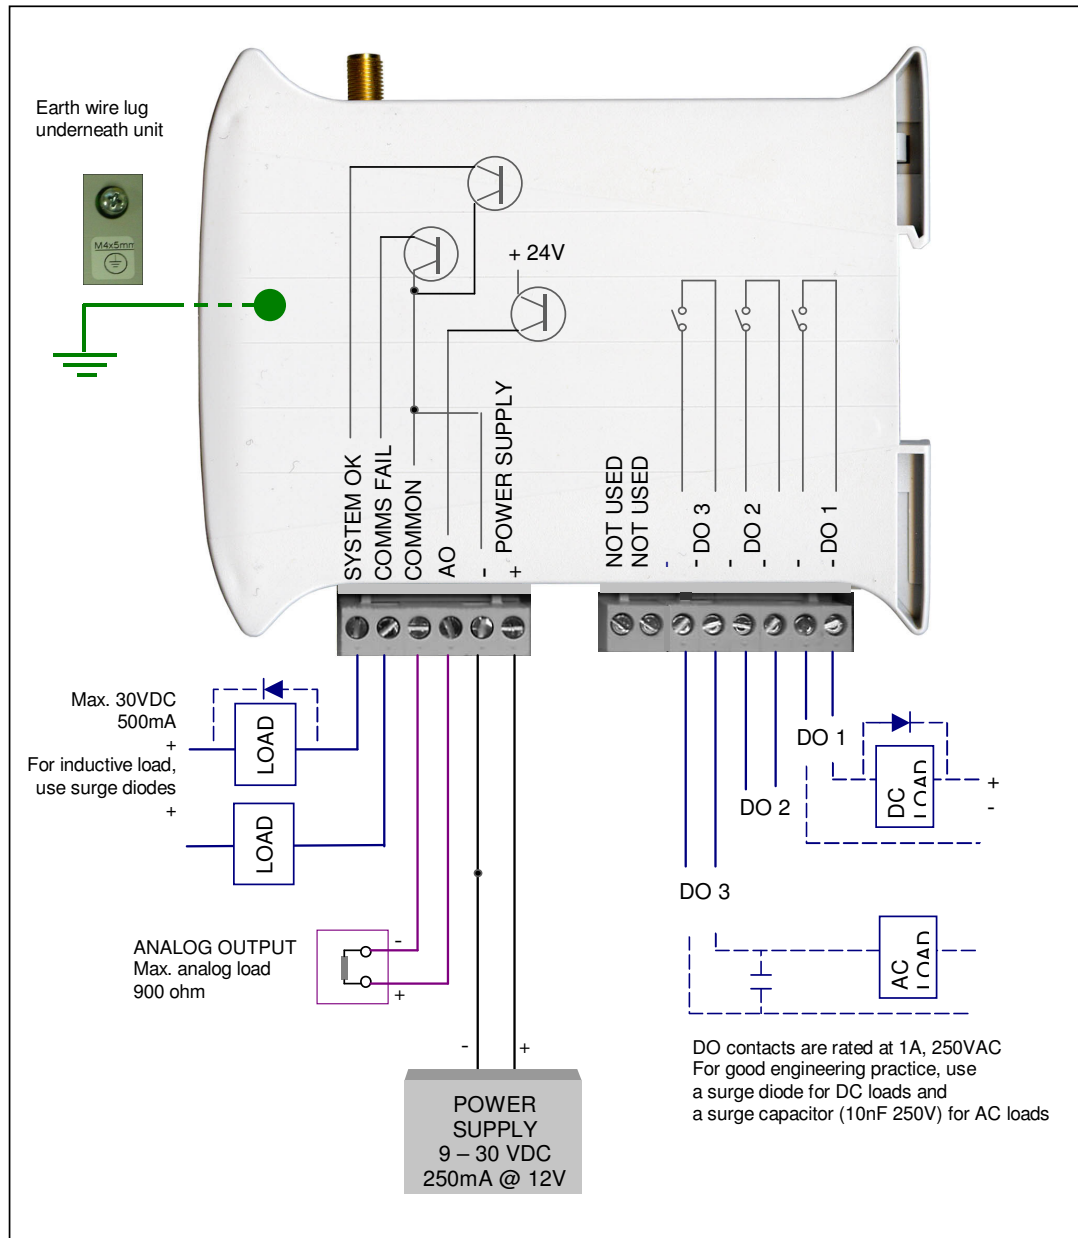

The front panel contains the following components:

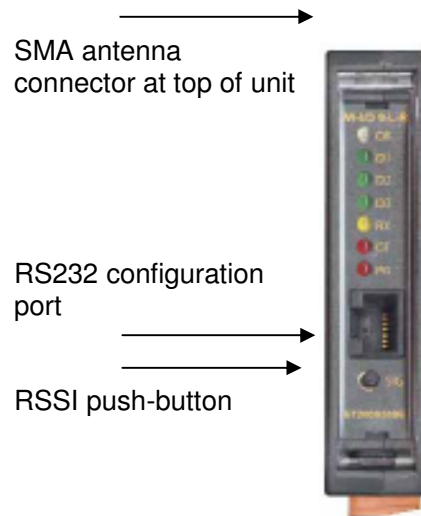

The LEDs on the front panel indicate the unit status:

| LED Status                         | Indicates   |  |     |                            |
|------------------------------------|---|--|-----|----------------------------|
| None                               | No power supply.  |  |     |                            |
| OK LED Green                       | Current status of the unit OK.  |  |     |                            |
| OK LED Red                         | Fault condition detected in unit.   |  |     |                            |
| RX Led Flashes                     | Receiving Message.  |  |     |                            |
| CF Led ON                          | Module Communication Failure Output is active.  |  |     |                            |
| PG LED on                          | Configuration Cable Connected.  |  |     |                            |
| Output LED ON                      | The Output LEDS (i.e. D1, D2, D3) light when the corresponding output is active.  |  |     |                            |
|                                    | D1  | Relay output D1 is ON (Contact Closed).      |     |                            |
|                                    | D2  | Relay Output D2 is ON.                       |     |                            |
|                                    | D3  | Relay Output D3 is ON.                       |     |                            |
| LEDs with RSSI Push Button Pressed | When you press the RSSI push button, the unit shows the signal strength by lighting the LEDs from the bottom to the top. Signal strength is the strength of the last message received that was addressed to this station. |  |     |                            |
|                                    | LED   | Signal Strength                              | LED | Signal Strength            |
|                                    | D1  | More than -85 dBm                            | RX  | More than -100 dBm         |
|                                    | D2  | More than -90 dBm                            | CF  | More than -105 dBm         |
|                                    | D3  | More than -95 dBm                            | PG  | Always on during RSSI test |
| Output LED flashing quickly        | If an output is in communication failure, the corresponding LED flashes at 5 Hz.  |  |     |                            |
|                                    | D1  | Relay Output D1 is in communication failure. |     |                            |
|                                    | D2  | Relay Output D2 is in communication failure. |     |                            |
|                                    | D3  | Relay Output D3 is in communication failure. |     |                            |
|                                    | PG  | Analog output is in communications failure.  |     |                            |

## Installing the antenna

This section explains how to install your antenna and contains the following sections:

| Section                                 | Description  | For more information, see ...               |
|---|--|---|
| <b>Supported antennas and cables</b>    | Details the antennas and cables you can use with the units.              | Supported antennas on page 12.              |
| <b>Radio transmission distances</b>     | Details the distances for reliable operation.                            | Radio transmission distances on page 14.    |
| <b>Installing and earthing antennas</b> | Details important information about installing and earthing antennas.    | Installing and earthing antennas on page 15 |
| <b>Dipole and collinear antennas</b>    | Details important information about using dipole and collinear antennas. | Dipole and collinear antennas on page 16.   |
| <b>Yagi antennas</b>                    | Details important information about using Yagi antennas.                 | Yagi antennas on page 18.                   |

For more information, see the next sections.

## Supported antennas

You can use the following antennas with the units:

| Antenna                    | Additional information  | Total gain (including cable) |
|----------------------------|---|------------------------------|
| <b>WI-ANT-DEMO-900</b>     | Whip antenna for mounting directly onto the module - operation up to ½ mile (1 km). | -6 dBi                       |
| <b>WI-ANT-DPL-0-16</b>     | 0 dBi Dipole antenna with 15' of Cellfoil cable and SMA connector.                  | 0 dBi                        |
| <b>WI-ANT-CLR-900-5-32</b> | 5dBi Collinear omni-directional antenna with N-type connector.                      | 5 dBi                        |
| <b>WI-ANT-CLR-900-8-54</b> | 8dBi Collinear omni-directional antenna with N-type connector.                      | 8 dBi                        |
| <b>WI-ANT-YGI-10-6</b>     | 10dBi Yagi directional antenna with N-type connector.                               | 10 dBi                       |
| <b>WI-ANT-YGI-15-16</b>    | 15dBi Yagi directional antenna with N-type connector.                               | 15 dBi                       |

You can use the following cables with the units:

The following table shows compatible cables for different antennas when used with the WI-I/O 9-L-T:

| Antenna                    | North America                   | Australia/NZ                     |
|----------------------------|---------------------------------|----------------------------------|
| <b>WI-ANT-CLR-900-5-32</b> | Any cable.                      | WI-CCSMA-N-33 or WI-CCSMA-N-66   |
| <b>WI-ANT-YGI-10-6</b>     | Any cable.                      | WI-CCSMA-N-66                    |
| <b>WI-ANT-YGI-10-6</b>     | WI-CCSMA-N-66                   | External cable with loss > 9dB.  |
| <b>WI-ANT-YGI-15-16</b>    | External cable with loss > 9dB. | External cable with loss > 15 dB |

You must carefully select antennas for WI-I/O 9-L-T modules to avoid contravening the maximum power limit on the unlicensed channel. The net gain of the antenna/cable configuration should be no more than 6dB in North America (USA, Canada, Mexico) and no more than 0 dB in Australia / New Zealand.

#### Note

The net gain of an antenna/cable configuration is the gain of the antenna (in dBi) less the loss in the coaxial cable (in dB).

For example, an WI-ANT-CLR-900-8-54 antenna with a WI-CCSMA-N-66 cable has a net gain of 2dB (i.e. +8 dB – 6 dB) at 900 MHz.

The WI-I/O 9-L-R module has no limitation on antenna gain, as this module does not incorporate a radio transmitter.

The following table details the gains of some typical antennas:

| Antenna                       | Gain (dBi) |
|-------------------------------|------------|
| Dipole with integral 3m cable | 0          |
| Dipole without cable          | 2          |
| 5dBi Collinear (3dBd)         | 5          |
| 8dBi Collinear (6dBd)         | 8          |
| 3 element Yagi                | 5          |
| 6 element Yagi                | 10         |

The following table details losses for typical cables:

| Cable    | Loss (dB per 10m) at 900 MHz |
|----------|------------------------------|
| RG58     | -5                           |
| RG213    | -2.5                         |
| Cellfoil | -3                           |

## Radio transmission distances

The unit will operate reliably over large distances depending on the:

- Antenna type;
- Antenna location;
- Amount of radio interference; and
- **Radio path obstructions** (e.g. hills or trees).

Typical reliable distances are:

| Area                | Distance  | Additional information   |
|---------------------|-----------|--|
| <b>USA/Canada</b>   | 20+ miles | 6dB net gain antenna configuration permitted (4W Equivalent RF power permitted). |
| <b>Australia/NZ</b> | 20+ km    | Unity gain antenna configuration (1W Equivalent RF power permitted).             |

To achieve these distance, you must elevate at least one site on a hill or transmission tower.

Modules will operate reliably with some radio path obstruction; however obstructions also reduce the reliable distance.

### Note

You must test all obstructed paths to check the reliability of the path.

You can achieve maximum transmission distances if the radio path has “line of sight”. For example, raising antennas above intermediate obstructions including hills, trees, etc. Obstructions reduce the range; however they may not prevent a reliable path.

The closer the obstruction is to the antenna, the greater the blocking effect. For example, a group of trees around the antenna is a larger obstruction than a group of trees further away from the antenna. You can achieve longer distances by mounting one antenna on top of a hill.

### Note

Due to the earth’s curvature, you must elevate antennas higher than the ground level between the antennas for longer paths (greater than 3 miles / 5 km).

The unit can tolerate larger amounts of obstructions for shorter distances. For very short distances, you can also mount the antennas inside buildings.

If two WI-I/O 9-x modules cannot communicate reliably, you can use a third WI-I/O 9-x module as a “repeater” to receive and re-transmit messages. This module may also have input/output (I/O) signals connected to it and form part of the I/O network.

### Note

1. Weidmuller Inc. recommends using the WI-GTWY-9-xxx module as a repeater unit between WI-I/O 9-L-T and WI-I/O 9-L-R modules.

2. To use a repeater unit, the WI-I/O 9-L-x modules and the repeater module must be configured using the supplied configuration software. The factory default configuration described in the Quick Start Guide cannot use a repeater unit.

---

## *Installing and earthing antennas*

You must connect an antenna to each WI-I/O 9-x module using the SMA connector at the top of the enclosure.

Weidmuller Inc. recommends carefully taping the connections between the antenna and coaxial cable to prevent moisture ingress. Moisture ingress in the coaxial cable is a common cause of radio system problem as it greatly increases the radio losses.

Weidmuller Inc. recommends taping the connection with three layers of tape:

| Layer | Tape   |
|-------|--|
| 1     | PVC tape.  |
| 2     | Vulcanising tape (e.g. 3M 23 tape).                    |
| 3     | Additional layer of PVC UV-stabilized insulating tape. |

The first tape layer lets you easily inspect the joint if required as you can easily remove the vulcanising seal.

---

### **Note**

You must effectively earth all masts for mast-mounted antennas to avoid lightning surges. We also recommend using a coaxial surge diverter for antennas mounted outside industrial plant environments.

---

If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can provide shielding by installing a lightning rod above the antenna.

You should connect the antenna to the module using 50 ohm coaxial cable (e.g. RG58 or RG213) terminated with a male coaxial connector. The higher the antenna is mounted, the greater the transmission range; however as the length of coaxial cable increases so do cable losses. For use on unlicensed frequency channels, there are several types of antenna suitable for use.

If you mount antennas on elevated masts, you should effectively earth the masts to avoid lightning surges. The WI-I/O 9-L-x radios are fitted with surge protection.

---

### **Note**

For high lightning risk areas, Weidmuller Inc. recommends additional surge suppression devices. If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can install a lightning rod to provide shielding.

---

## *Dipole and collinear antennas*

This section contains important information for using dipole and collinear antennas. For more information, see the next sections.

### Dipole antennas

Unity gain dipole antennas are commonly used on unlicensed channels. The dipole antenna does not provide any gain, so the power transmitted from the antenna is the same as the power out of the module.

A dipole antenna that comes supplied with integral 15 ft cable does not require additional coaxial cable.

You should mount dipole antennas vertically, preferably no less than 1 metre away from a wall or mast for maximum performance.

### Collinear antennas

Collinear antennas transmit the same amount of radio power in all directions horizontally, and are easy to install and use. They provide gain by compressing the radiated signal to a flattened disc shape, and reducing the amount of signal radiated above and below the horizontal plane.

Collinear antennas are generally used at a central site with more than one remote site, or at a repeater site.

Collinear antennas are similar in appearance to dipole antennas; however the antenna is longer.


Collinear antennas are supplied without cable, and require additional coaxial cable.

You can use collinear antennas to:

- **Transmitter** – to compensate for the losses in long lengths of coaxial cable.
- **Receiver** – to increase receive sensitivity.



The following diagrams shows the recommended installation for collinear and dipole antennas:

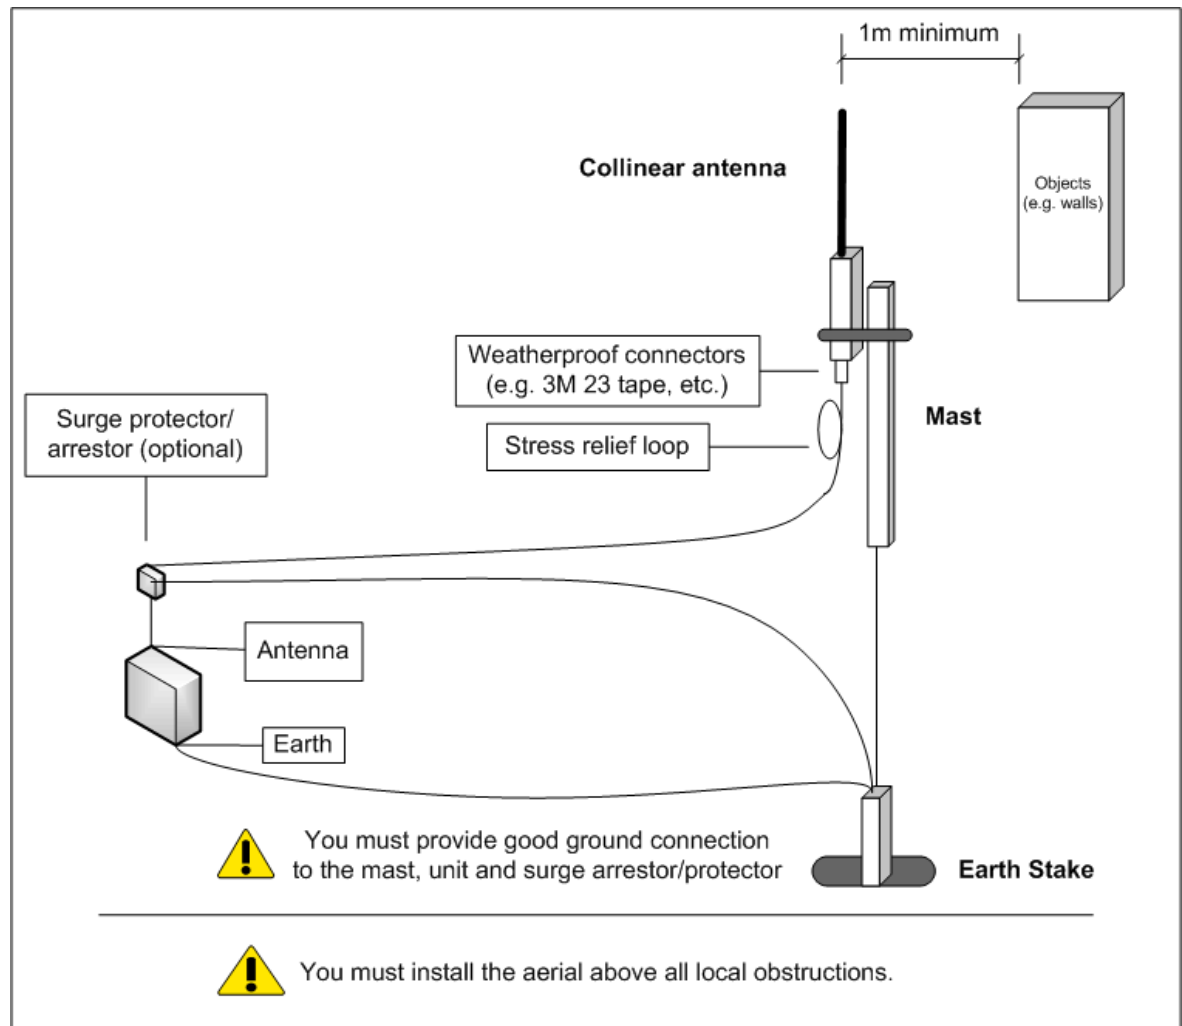

## Yagi antennas

Yagi antennas are directional and have positive gain to the front of the antenna and negative gain in other directions. You can use the gain to:

- **Compensate for coaxial cable loss for transmitter unit;** and
- **Increase receive sensitivity for receiver units.**

You should install Yagi antennas with the central beam horizontal and pointed directly in the transmission direction to benefit from the antenna gain.

### Note

Yagi antennas usually have a drain hole on the folded element. You should position the drain hole at the bottom when installing the antenna.

You can install Yagi antennas:

- **Vertically polarized** – with the elements in a vertical plane; or
- **Horizontally polarized** – with the elements in a horizontal plane.

The following table shows the recommended installation mode for different situations.

| If your installation has ...                                    | Weidmuller Inc. recommends using ...   |
|---|--|
| <b>Two stations both using Yagi antennas</b>                    | <ul style="list-style-type: none"> <li>• Horizontal polarization for the stations.</li> </ul>  |
| <b>Two or more stations communicating with a common station</b> | <ul style="list-style-type: none"> <li>• Vertical polarization for the stations; and</li> <li>• Dipole or collinear (i.e. non-directional) antenna for the central station.</li> </ul> |

This page intentionally left blank.

## Installing the power supply

The unit works with a 9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use.

### Warning – explosion hazard

Do not disconnect while circuit is live unless area is known to be non-hazardous.

The following table shows the power supply requirements:

| Power supply | WI-I/O 9-L-T | WI-I/O 9-L-R |
|--------------|--------------|--------------|
| 12V          | 600 mA       | 250 mA       |
| 24V          | 300 mA       | 125 mA       |

The power supply can be a floating supply or negatively grounded.

The transmitter provides a 24V DC regulated supply for analog loop power. The supply is rated at 35 mA and should ONLY be used for powering analog loops.

To install the power supply:

1. Connect the positive lead to **Power Supply Input**.
2. Connect the negative lead to **Ground**.


### Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

You should connect the module to the same ground/earth point as the antenna mounting to avoid differences in earth potential during voltage surges.

Do NOT connect the positive side of the supply to Earth.

3. The following diagram illustrates the connection:

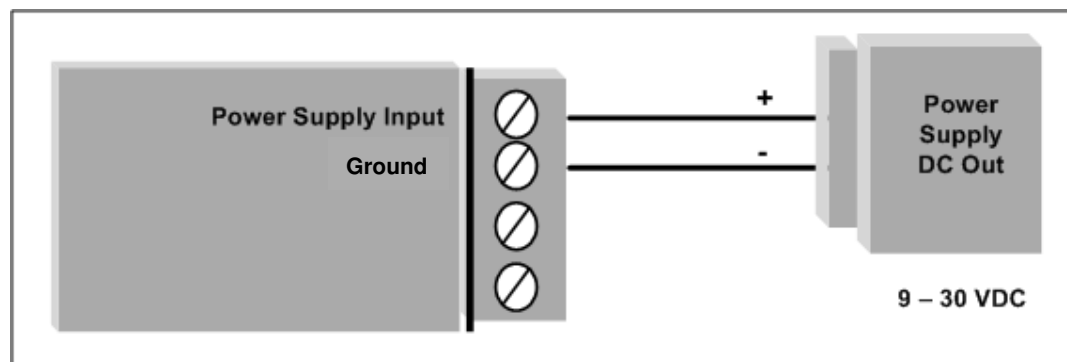

## Inputs and outputs

The units have the following inputs and outputs:

| Input/output                          | WI-I/O 9-L-T | WI-I/O 9-L-R | Description  | For more information, see ...                   |
|---------------------------------------|--------------|--------------|--|---|
| <b>Digital inputs</b>                 | 2            |              | Suitable for Voltage free contact, NPN transistor, 0-5V signal.  | Digital inputs on page 22.                      |
| <b>Relay outputs</b>                  |              | 3            | 250VAC 1A / 30VDC 1A.  | Relay outputs Important Information on page 23. |
| <b>Status outputs</b>                 | 2            | 2            | Max 30VDC, 500 mA. Indicate module status, communication failure and local setpoint status.                  | Status outputs on page 24.                      |
| <b>Analog inputs</b>                  | 1            |              | 4-20 mA with over-range and under-range.<br>0-10 mA with over-range.   | Analog input on page 25.                        |
| <b>+24V Loop supply</b>               | 1            |              | Provides power for 1 external current loop (up to 35 mA).  | Installing the power supply on page 20.         |
| <b>Analogue setpoint</b>              | 1            |              | Allows discrete setpoint to be controlled from analog input. Threshold adjustable via rotary switch.         | Refer to the <i>User Manual</i> .               |
| <b>Thermocouple / millivolt input</b> | 1            |              | Provides measurement of E, J, K, T type Thermocouple, millivolt signals and user-defined thermocouple types. | Thermocouple input on page 28                   |
| <b>Thermocouple setpoint</b>          | 1            |              | Lets you control discrete setpoint from thermocouple with threshold adjustable via rotary switch.            | Refer to the <i>User Manual</i> .               |
| <b>Pulse inputs</b>                   | 2            |              | Up to 10Hz.  | Pulse input on page 29.                         |
| <b>Analog output</b>                  |              | 1            | 0-22 mA, suitable for loop powered, floating input or single-ended input device.                             | Analog output on page 30.                       |

For more information, see the next sections.

## Digital inputs

The WI-I/O 9-L-T module provides two digital inputs suitable for:

- **Voltage free contacts** – e.g. mechanical switches; or
- **NPN transistor devices** – e.g. electronic proximity switches; or
- **0-5V signals** - 2V – 4V Minimum range.

**Note**



PNP transistor devices are not suitable.

The unit provides contact wetting current of approximately 5mA to maintain reliable operation of driving relays.

Each digital input is connected between the appropriate **Digital Input** terminal and **Ground**.

Each digital input circuit includes a LED indicator that lights when the digital input is active (i.e. when the input circuit is closed).

To activate the digital input, the switching device resistance must be less than 200 ohms.
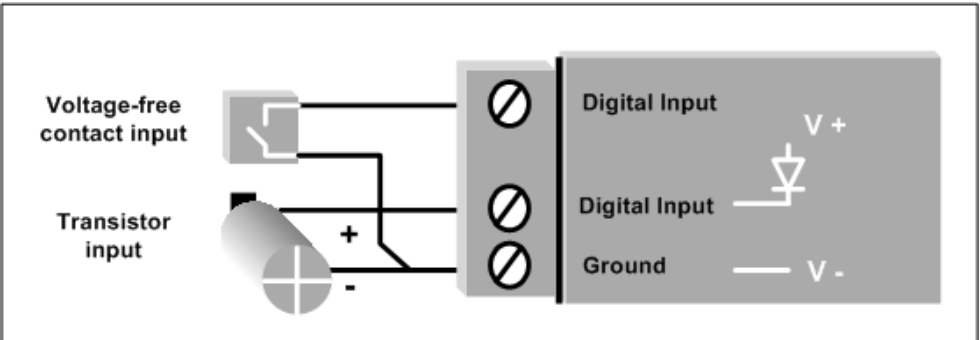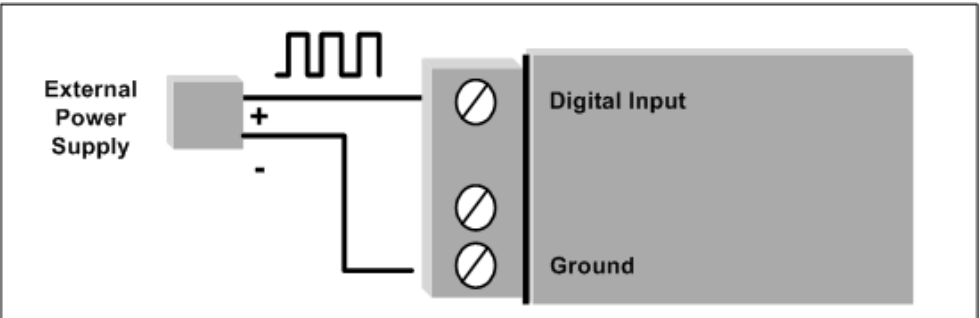
| Connection method         | Example  |
|---------------------------|--|
| Voltage free contact      |   |
| Active 0-5v signal device |  <div><p><b>Note</b><br/>Use a solid state relay if the voltage range is not suitable.<br/>Voltage Range is low: 2V (max); high: 4V (min).</p></div> |


## Relay outputs

The WI-I/O 9-L-R module provides three normally open voltage-free relay contacts rated at 250VAC / 50VDC 1A.


You can use these outputs to directly control low-powered equipment or power larger relays for higher-powered equipment.

For inductive loads, Weidmuller Inc. recommends:

**DC relays** - use flyback diodes across the external circuit to prevent arcing across the relay contacts.

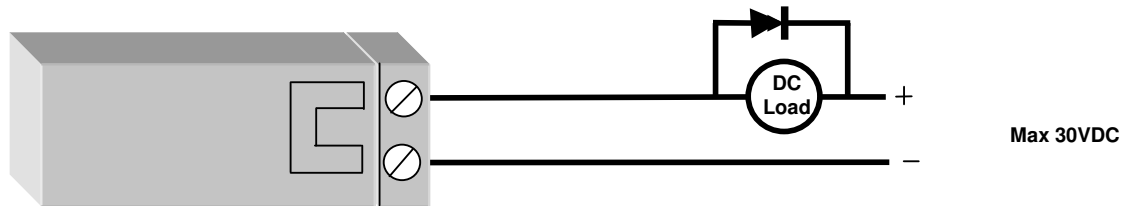

**AC relays** – use capacitors (e.g. 10nF 250V) to prevent arcing across the relay contacts.

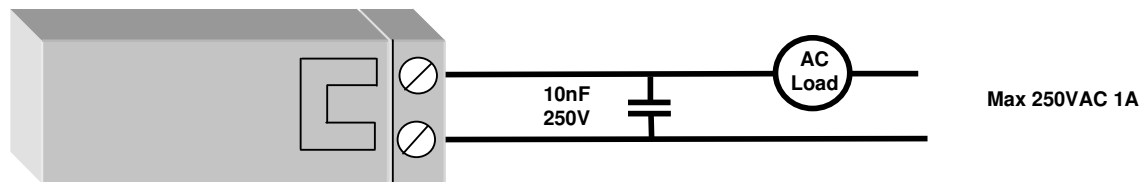

You can individually configure digital outputs to turn off if no command message is received by the output for a certain period. This feature provides an intelligent watchdog for each output, so communications failure at a transmitting site causes the output to revert to a known state.

The output circuit is connected to the appropriate pair of **Digital Output** terminals. Each digital output circuit includes a LED indicator that lights when the digital output is active. The LED flashes if the watchdog alarm is active.

### **IMPORTANT SAFETY INFORMATION**

In order to comply with Electrical Safety Standards, when connecting SELV **AND** voltages which are greater than SELV (30VAC or 60VDC) together, then Relay Output 2 must **NOT** be used in order to provide sufficient isolation between the outputs


## Status outputs

The unit contains the following status outputs:

- **System OK;**
- **Setpoint Output;** and
- **Communications Failure.**

Status outputs are FET output to common rated at 30VDC 500 mA.

Connect the output circuit to the appropriate Status **Output** terminal. Each status output circuit is associated with an LED indicator that lights lit when the digital output is active.

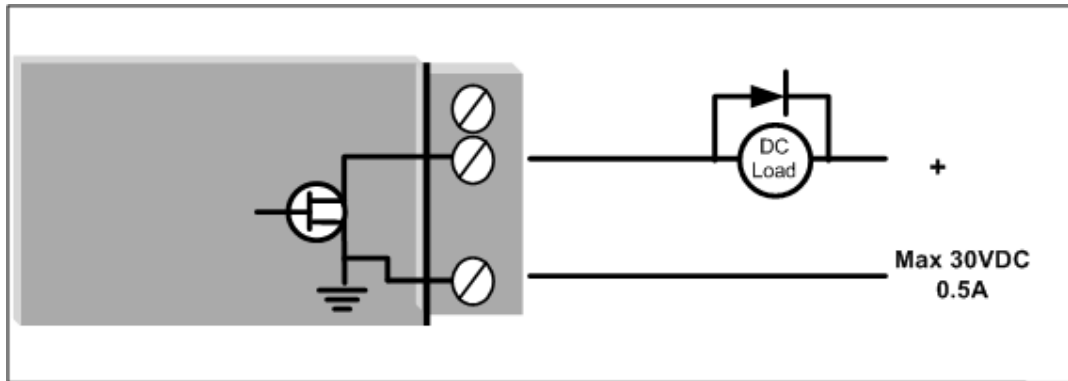

The following table details the status output behavior:

| Status output                                | LED | LED status | Description   |
|--|-----|------------|---|
| <b>System OK active (both modules)</b>       | OK  | Green      | No fault detected   |
| <b>System OK inactive</b>                    | OK  | Red        | <ul style="list-style-type: none"> <li>Internal fault detected.</li> <li>Supply voltage Low</li> <li>Analog Loop supply overloaded</li> </ul> |
| <b>Setpoint Output (WI-I/O 9-L-T)</b>        | SP  | Green      | Local setpoint attached to 4-20mA analog input.   |
| <b>Communications Failure (WI-I/O 9-L-R)</b> | CF  | Red        | Watchdog alarms active on digital outputs or analog outputs.  |



---

## Analog input

The WI-I/O 9-L-T module provides one 0 - 20 mA DC analog input for connecting to instrument transducers (e.g. level, moisture, pressure transducers, etc.).

---

### Note

The WI-I/O 9-L-T module inputs measure down to 0mA and can also be used for zero based signals (e.g. 0 - 10 mA).

---

The analog input has a positive and negative terminal and can be placed at any point in the current loop, providing neither input rises above the 24 volt **Analog Loop Supply** level.

Each input has a loop resistance of less than 250 ohms and zener diode protection is provided against over-voltage and reverse voltage.

---

### Note

You may require additional protection in high voltage or noisy environments or for long wiring runs.

---

A 24VDC loop supply is available on the WI-I/O 9-L-T module for powering the analog transducer loops. In this situation, connect the:

- **Analog loop** - between an **Analog Input (-)** terminal and **Ground**.
- **Positive terminal** – i.e. **Analog Input (+)** to the +24V **Analog Loop Supply**.

Externally powered loops may be connected by connecting the input between "Analog Input (+)" and "Analog Input (-)" Common mode voltage may be -0.5V to 27V.

Weidmuller Inc. recommends using shielded cable for analog I/O loops to minimize induced noise and Radio Frequency Interference (RFI).

---




### Note


You should only connect one end of the cable shield to Earth

---

To connect an analog signal from a PLC or DCS output to an analog input on the WI-I/O 9-L-T, you must carefully check the internal circuit of the output as different devices use different ways to create an analog signal.

The following diagrams illustrate different connection methods:
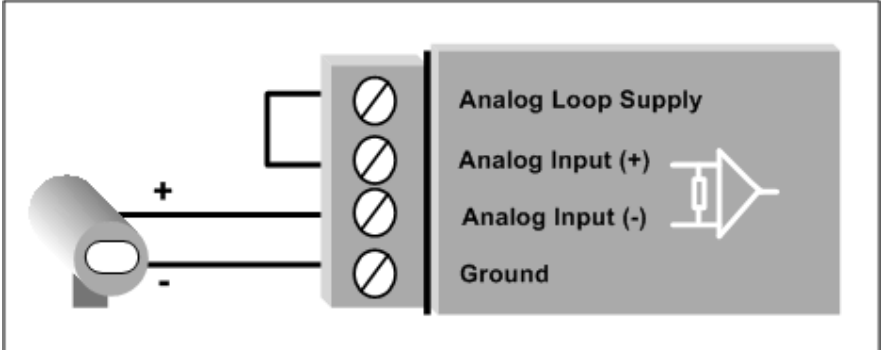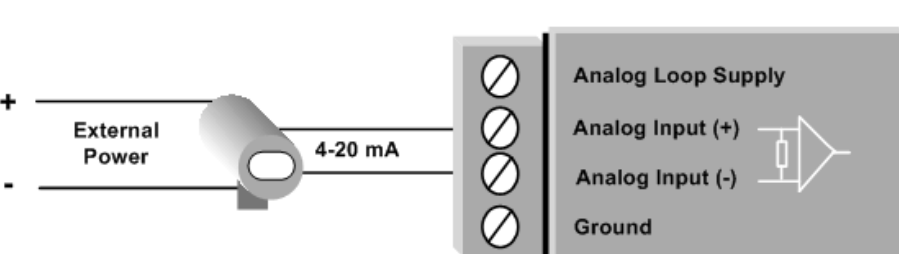
| Analog signal source  | Example  |
|-----------------------|--|
| 2 wire transducer     |  <p><b>Note</b><br/>Analog input must be within 27V of Ground.<br/>If your terminal voltage exceeds this, you must use a loop isolator.</p>  |
| 4 wire transducer     |  <p><b>Note</b><br/>Analog input must be within 27V of Ground.<br/>If your terminal voltage exceeds this, you must use a loop isolator.</p>  |
| Current source output |  <p><b>Note</b><br/>1. Analog input must be within 27V of Ground.<br/>If your terminal voltage exceeds this, you must use a loop isolator.<br/>2. Ground is connected to ground/earth.<br/>If you cannot ground the PLC COM, you must use a loop isolator.</p> |
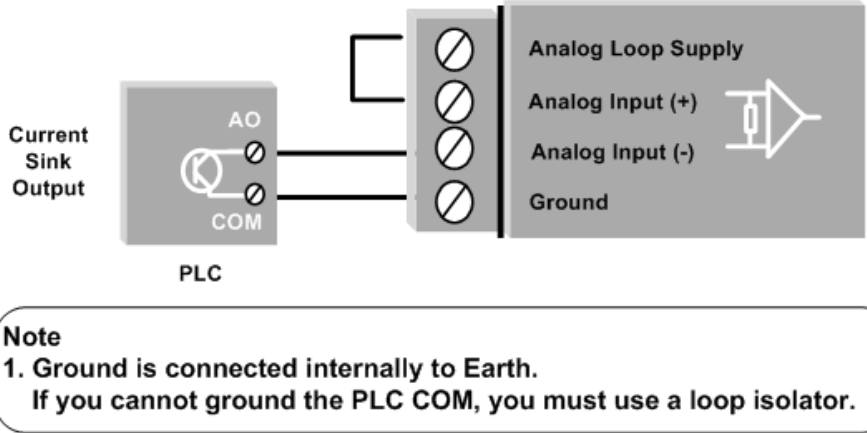
| Analog signal source | Example   |
|----------------------|---|
| Current sink output  | <div></div> |


---

## Thermocouple input

The WI-I/O 9-L-T provides one input suitable for connection to a thermocouple or a millivolt level signal. The module provides linearization tables for J, K and T type thermocouples and also supports other types via a user linearization table.

Millivolt signals in the range -10mV to +100 mV are supported.

For more information on configuring the thermocouple input and cold-junction compensation to suit your application, refer to the ***User Manual***.

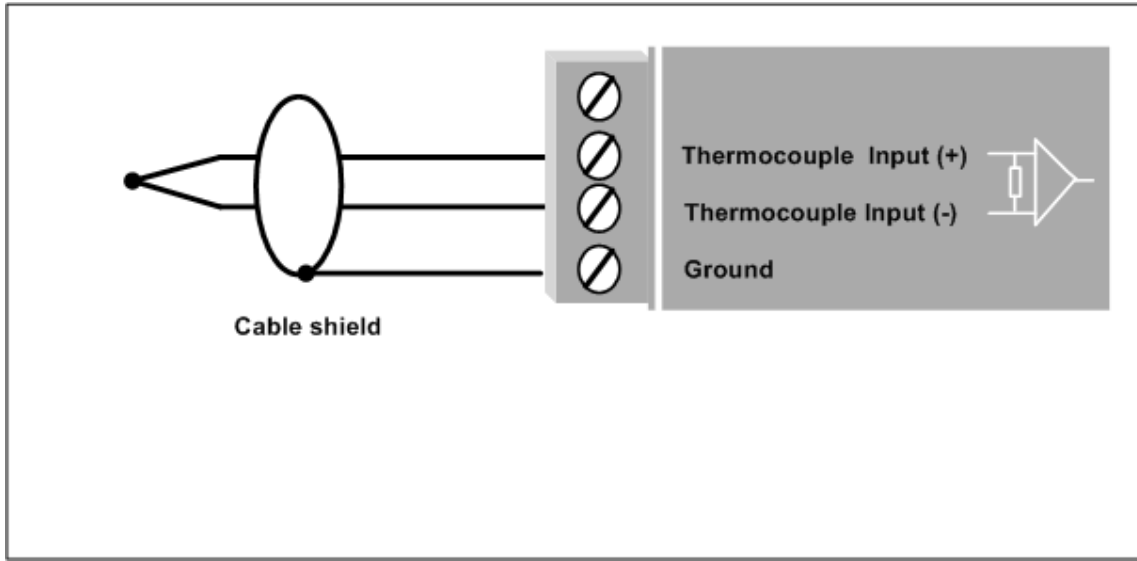

## Pulse input

The WI-I/O 9-L-T module lets you configure the digital inputs as pulse inputs with the following characteristics:



| Characteristic   | Value   |
|------------------|---------|
| Maximum rate     | 10 Hz   |
| Minimum off time | 20 mSec |
| Minimum on time  | 20 mSec |

Using this mode, you can map the pulse count to a remote output by re-generating as a Pulse Output on WI-I/O 9-1or Digital Output on a WI-I/O 9-3 unit.

**Note**

You should connect the pulse input in the same way as a digital input.

The following diagrams illustrate different connection methods:
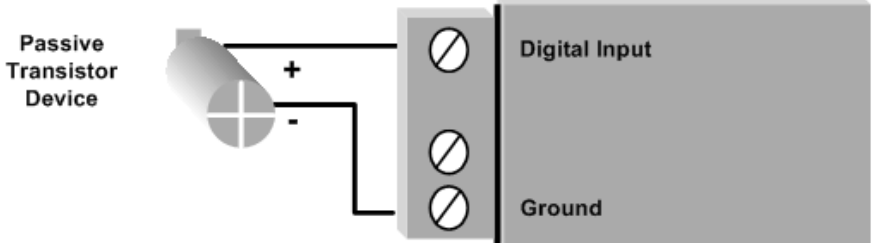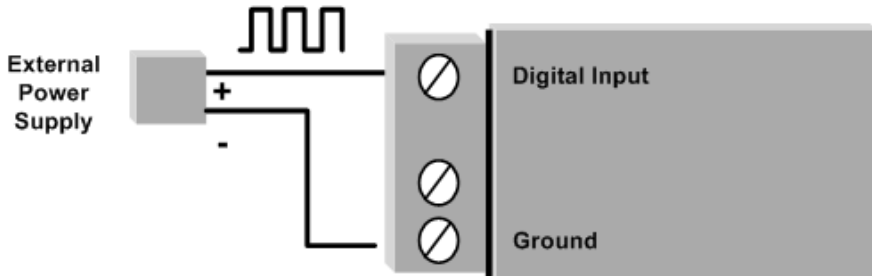
| Connection method   | Example  |
|---------------------|--|
| Passive transistor  |   |
| Active pulse device |  <div><p><b>Note</b><br/>Use a solid state relay if the voltage range is not suitable.<br/>Voltage Range is low: 2V (max); high: 4V (min).</p></div> |

## Analog output

The WI-I/O 9-L-R module provides a 4 - 20 mA DC analog output for connecting to instrument indicators to display remote analog measurements. The analog output is a current source provided from an internally generated +24V loop supply.



When connecting to an external device (e.g. electronic indicator, recorder, PLC / DCS input, etc.) by connecting the output between the **Analog Output** terminal (+) and the **COM** terminal (-).


**Note**

Zener protection of analog outputs provides protection against short periods of over-voltage; however longer periods may result in module damage.

You can also individually configure analog outputs to turn off (i.e. 0 mA) if no command message is received to the output for a certain period.

The following diagrams illustrate different connection methods:
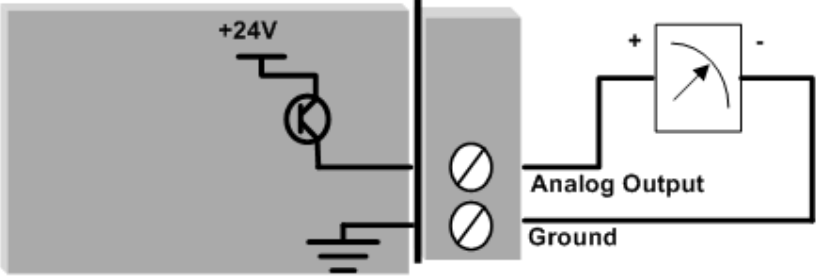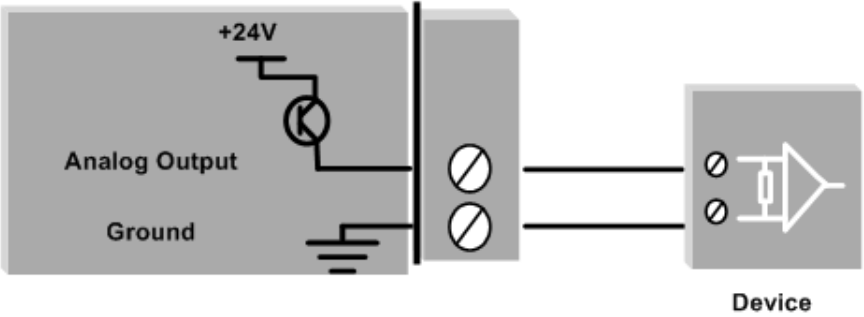
| Connection method     | Example  |
|-----------------------|--|
| Loop powered device   |   |
| Floating input device |  |
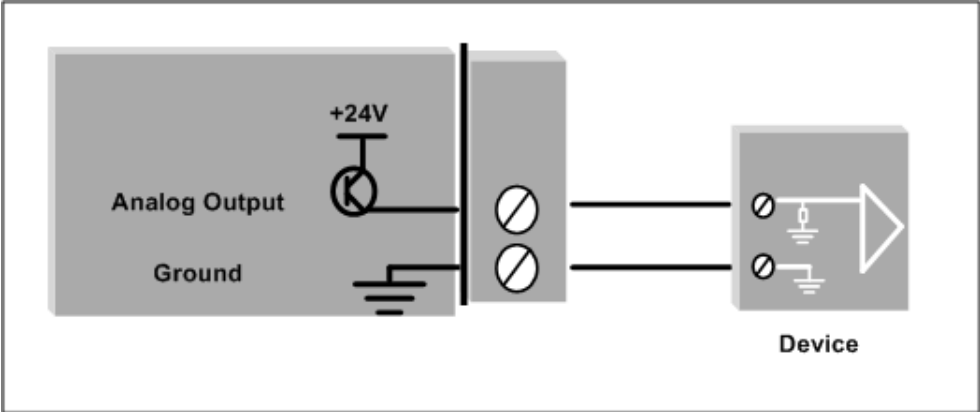
| Connection method            | Example  |
|------------------------------|--|
| To single-ended input device |  |

---

## Installing and configuring the unit

---

This section describes how to install and configure your unit and contains the following sections:

| Section                      | Description   | For more information, see ...      |
|------------------------------|---|------------------------------------|
| <b>Installing the unit</b>   | Describes how to physically install your unit.                    | Installing the unit on page 33.    |
| <b>Configuring your unit</b> | Describes the different ways to configure your unit.              | Configuring your units on page 34. |
| <b>Testing your unit</b>     | Describes Weidmuller Inc.' recommendations for testing your unit. | Testing your units on page 35.     |

For more information, see the next sections.



## Installing the unit

To install the unit:

1. Connect signals to the supplied terminals.
2. Connect the radio antenna.
3. Install DIN rail to mount the module.
4. Clip the module to the DIN rail:

You can now configure your unit. For more information, [Configuring your units](#) on page 34.

## Configuring your units

You can configure your network using:

- **Default factory configuration** – that lets you easily setup your network as a simple send/receive; or
- **User-defined customized configuration** – that lets you set specific information about your network and allows communication with other Weidmuller Inc. WI-I/O 9-x series devices.

For more information on setting a user-defined customised configuration, see the **User Manual**.

For more information on setting the factory default configuration, refer to the **Quick Start Guide** included with your module.

The following table details the factory default configuration:

| Signals sent over radio   |       |                         |
|---------------------------|-------|-------------------------|
| WI-I/O 9-L-T(Transmitter) | Sends | WI-I/O 9-L-R (Receiver) |
| Digital Input 1           | ⇒     | Digital Output 1        |
| Digital Input 2           | ⇒     | Digital Output 2        |
| Analog Setpoint           | ⇒     | Digital Output 3        |
| Analog input (4-20 mA)    | ⇒     | Analog output           |

| Other signals                      |   |
|------------------------------------|---|
| WI-I/O 9-L-T(Transmitter)          | WI-I/O 9-L-R (Receiver)   |
| Thermocouple Input (Not used)      | <b>Communication Failure</b><br>(Comes on if no messages from WI-I/O 9-L-T) |
| Setpoint Output (Local indication) |   |
| System OK (On if system OK)        | <b>System OK</b><br>(On if system OK)                                       |

## Testing your units

We recommend you bench test the complete system before installing a new system.

Configuration problems are easier to identify and fix when the units are next to each other.

The following table describes common problems and recommended solutions:

| If your installation has ...   | You should check ...  | Weidmuller Inc. recommends ...  |
|--|---|---|
| <b>Poor radio channel communications</b> <ul style="list-style-type: none"> <li>TX LED flashes but no RX LED</li> <li>Output LEDs flash quickly</li> </ul> | <ul style="list-style-type: none"> <li>The antenna installation.</li> <li>For radio interference on the same channel.</li> <li>The radio path is adequate.</li> </ul> | <ul style="list-style-type: none"> <li>Higher performance antennas if the path is too long.</li> <li>Higher mounting points to overcome obstructions.</li> <li>Using an intermediate unit as a repeater.</li> </ul> |
| <b>Red OK LED</b>  | <ul style="list-style-type: none"> <li>Power Supply voltage</li> </ul>  | <ul style="list-style-type: none"> <li>Supply should be between 9 and 30VDC.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>Analog loop supply current</li> </ul>  | <ul style="list-style-type: none"> <li>The analog loop supply is rated for 35 mA max.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>Module configuration</li> </ul>  | <ul style="list-style-type: none"> <li>Your module configuration may be invalid. Re-load or restore factory default configuration.</li> </ul>   |
| <b>TX LED flashes but no RX LED (bench testing)</b>  | <ul style="list-style-type: none"> <li>Ensure the WI-I/O 9-L-R is set to the same country and frequency band as the WI-I/O 9-L-T</li> </ul>                           | <ul style="list-style-type: none"> <li>Register the receiver with the transmitter. (Refer to the <b>Quick Start Guide</b>)</li> </ul>   |
| <b>RX LED Flashes but no outputs change</b>  | <ul style="list-style-type: none"> <li>For a user-defined customized configuration, - check the configuration.</li> </ul>   | <ul style="list-style-type: none"> <li>Check the configuration and re-program the modules.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>For default configuration, check the receiver is registered with the transmitter.</li> </ul>                                   | <ul style="list-style-type: none"> <li>Repeat the procedure to register the receiver with the transmitter.</li> </ul>   |

For support for other testing issues, please contact Weidmuller Inc..

## Unit specifications

This section details the specifications for each unit.

### Transmitter unit

| Input/output        | Number      | Additional information  |
|---------------------|-------------|---|
| Digital inputs      | 2           | Dry-contact digital inputs slow-pulsed at 10Hz.<br>All inputs are suitable for voltage free contacts (e.g. mechanical switches) or NPN transistor devices (e.g. electronic proximity switches).<br><b>NOTE:</b> PNP transistor device inputs are NOT suitable.                |
| Status outputs      | 2           | Separate System OK and Setpoint Status  |
| Analog inputs       | 1           | 0-20mA differential input; 16-bit resolution, 0.1% accuracy, 10 ohm input impedance.  |
| Thermocouple inputs | 1           | J, K or T type thermocouple with on-board cold-junction compensation.<br>Cold junction compensation accuracy $\pm 1^\circ$ over ambient temp range: $-40^\circ$ to $+70^\circ\text{C}$ .  |
| Power supply        | 1           | 9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use.<br><b>WARNING:</b> Explosion hazard - do not disconnect while circuit is live unless area is known to be non-hazardous. |
| Transmitter         | 1           | 1-Watt Frequency Hopping Spread Spectrum (FHSS) Transmitter.  |
| Frequency           | 902-928 MHz | Actual frequency range depends on country.  |

### Receiver unit

| Input/output    | Number        | Additional information  |
|-----------------|---------------|---|
| Digital outputs | 3             | Voltage-free contacts rated at 250 VAC, 1A, 30VDC 1A<br>2 for digital inputs and 1 for setpoint.  |
| Status outputs  | 2             | Separate System OK and communication failure output.  |
| Analog output   | 1             | 16-bit resolution, 0.1% accuracy, single-ended source output.   |
| Power supply    | 1             | 9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use.<br><b>WARNING:</b> Explosion hazard - do not disconnect while circuit is live unless area is known to be non-hazardous. |
| Radio receiver  | 1             | High sensitivity FHSS UHF radio receiver.   |
| Frequency       | 902 – 928 MHz | Actual frequency range depends on country.  |
| Sensitivity     | -110 dBm      | At PER 8%.  |

## Ancillary hardware reference information

This section contains reference information about additional hardware components you may need for your unit.

### *RS232 serial cable*

You can connect the unit to a PC using an RS-232 serial cable to:

- **Transfer configuration information;**
- **Perform factory and field-testing.**

The serial port is an 8 pin RJ-45 plug that communicates using standard RS-232 signals:

| Signal information | Value                  |
|--------------------|------------------------|
| <b>Baud rate</b>   | 9600                   |
| <b>Bits</b>        | 8 bits with 1 stop bit |
| <b>Parity</b>      | No parity              |

Weidmuller Inc. supplies a green configuration cable wired to the following pin-out:

#### Note

The following pin-out information is for reference only.

| RJ-45    | Required | Signal name               | Normal colour  | DB9 |
|----------|----------|---------------------------|----------------|-----|
| <b>1</b> |          | Ring Indicator            | Green / White  | 9   |
| <b>2</b> |          | Data Carrier Detect       | Green          | 1   |
| <b>3</b> | Y        | Data Terminal Ready       | Orange / White | 4   |
| <b>4</b> | Y        | Signal Common             | Blue           | 5   |
| <b>5</b> | Y        | Receive Data (from Modem) | Blue / White   | 2   |
| <b>6</b> | Y        | Transmit Data (to Modem)  | Orange         | 3   |
| <b>7</b> |          | Clear to Send             | Brown / White  | 8   |
| <b>8</b> |          | Request to Send           | Brown          | 7   |

# Index

|                                     |     |                                    |        |
|-------------------------------------|-----|------------------------------------|--------|
| 2 wire transducer .....             | 29  | lightening rod .....               | 18     |
| 4 wire transducer .....             | 29  | lightening strike.....             | 18     |
| AC relays .....                     | 26  | line of sight .....                | 16     |
| active pulse device .....           | See | linearization tables.....          | 31     |
| active signal device .....          | 25  | loop powered device.....           | 33     |
| analog input .....                  | 28  | maximum transmission distance..... | 16     |
| analog output.....                  | 33  | mechanical switches.....           | 25     |
| antennas .....                      | 19  | millivolt signal .....             | 31     |
| compatible cables .....             | 13  | net gain.....                      | 15     |
| dipole .....                        | 19  | obstructions .....                 | 16     |
| installing .....                    | 16  | intermediate .....                 | 16     |
| polarization.....                   | 21  | over-voltage.....                  | 28     |
| supported antennas .....            | 13  | passive transistor.....            | 32     |
| arcing.....                         | 26  | pin-out.....                       | 40     |
| bench testing .....                 | 38  | PLC .....                          | 28     |
| cable .....                         |     | polarization .....                 | 21     |
| loss.....                           | 15  | polarized .....                    | 21     |
| cables .....                        |     | power supply .....                 | 23     |
| for antennas .....                  | 13  | installing .....                   | 23     |
| supported cables .....              | 13  | problems.....                      | 38     |
| WI-ANT-DPL-0-16 .....               | 13  | pulse input .....                  | 32     |
| coaxial surge diverter .....        | 18  | PVC tape .....                     | 18     |
| configuration .....                 |     | Radio Frequency Interference ..... | 28     |
| default factory.....                | 37  | receiver .....                     |        |
| user-defined customized .....       | 37  | components.....                    | 11     |
| configuring .....                   | 37  | front panel .....                  | 12     |
| connections .....                   |     | LEDs .....                         | 12     |
| taping .....                        | 18  | terminal connections .....         | 11     |
| current sink output .....           | 30  | relay outputs .....                | 26     |
| current source output.....          | 29  | reliable path .....                | 16     |
| DC relays.....                      | 26  | repeater .....                     | 16     |
| DCS.....                            | 28  | reverse voltage .....              | 28     |
| digital inputs.....                 | 25  | RFI.....                           | 28     |
| DIN rail .....                      | 36  | RJ-45 .....                        | 40     |
| dipole antennas .....               | 19  | rotary switch .....                | 9      |
| electronic proximity switches ..... | 25  | changing position .....            | 9      |
| explosive areas.....                | 23  | setpoint levels .....              | 9      |
| floating input device .....         | 33  | RS-232 .....                       | 40     |
| flyback diodes.....                 | 26  | serial cable .....                 | 40     |
| gain .....                          |     | setpoint .....                     |        |
| net gain .....                      | 15  | thermocouple .....                 | 24     |
| horizontal polarization.....        | 21  | setpoint levels.....               | 9      |
| installing .....                    | 36  | WI-ANT-CLR-900-8-54 .....          | 13, 14 |
| instrument transducers .....        | 28  | WI-ANT-CLR-900-5-32 .....          | 13     |
| interference.....                   | 16  | shielding .....                    | 18     |
| internal surge protection .....     | 23  | signals .....                      | 37     |
| LEDs .....                          |     | single-ended input device .....    | 34     |
| receiver .....                      | 12  | SMA connector.....                 | 18     |
| transmitter .....                   | 10  | solutions .....                    | 38     |

---

|                             |    |                              |        |
|-----------------------------|----|------------------------------|--------|
| specifications .....        | 39 | transmitter                  |        |
| status outputs .....        | 27 | components.....              | 8      |
| surge diverter.....         | 18 | front panel .....            | 9      |
| surge protection.....       | 18 | terminal connections .....   | 8      |
| surge suppression .....     | 18 | UV-stabilized tape .....     | 18     |
| switches                    |    | vertical polarization.....   | 21     |
| electronic proximity .....  | 25 | voltage free contact .....   | 25     |
| switches                    |    | vulcanising tape.....        | 18     |
| mechanical .....            | 25 | watchdog alarm .....         | 26     |
| taping connections.....     | 18 | WI-ANT-DEMO-900.....         | 13     |
| testing.....                | 38 | WI-ANT-YGI-15-16 .....       | 13, 14 |
| thermocouple.....           | 31 | WI-ANT-YGI-10-6 .....        | 13, 14 |
| thermocouple setpoint ..... | 24 | zener diode protection ..... | 28     |
| transducers.....            | 28 | zero based signals.....      | 28     |